



## AMT POSITION SENSOR

Industry	Industrial & Commercial Transportation
Application	Automated Manual Transmission (AMT)
Functions	Measure position of shift rails / forks (linear)
Technology	3D Hall (moving magnet)
Features	<ul style="list-style-type: none"> <li>• Non-contact travel</li> <li>• Robust design for truck application</li> <li>• One fastener interface to reduce installation Time</li> <li>• 3D Hall with temperature compensation factor</li> <li>• 4-way MCON sealed connector interface</li> <li>• Operating temperature: -40° C ... +150° C</li> </ul>

### UNITED STATES

United States – Harrisburg,  
a TE Connectivity Company  
Product Information Center:  
Phone: +1 800-522-6752  
Fax: +1 717-986-7575

### SOUTH AMERICA

South America,  
a TE Connectivity Company  
Phone: +54 11-4733-2015  
Fax: +54 11-4733-2083

### ASIA / PACIFIC

Australia – Sydney,  
a TE Connectivity Company  
Product Information Center:  
Phone: +61 2-9840-8200  
Fax: +61 2-9634-6188

### People's Republic of China

Hong Kong ,  
Phone: +852 2738-8731  
Fax: +852 2735-0243

Shanghai  
Phone: +86 21-3398-0000  
Fax: +86 21-3398-1999

### ASIA / PACIFIC

Korea – Seoul,  
a TE Connectivity Company  
Phone: +82 2-3415-4500  
Fax: +82 2-3486-3810

### EUROPE

Germany – Bensheim,  
a TE Connectivity Company  
Product Information Center:  
Phone: +49 6251-133-1999  
Fax: +49 6251-133-1988

### AFRICA

South Africa – Port Elizabeth,  
a TE Connectivity Company  
Phone: +27 41-503-4500  
Fax: +27 41-581-0440

**For further contact  
information please go to:**

[www.TE.com/support-center](http://www.TE.com/support-center)

### [te.com/sensorsolutions](http://te.com/sensorsolutions)

Measurement Specialties (MEAS), American Sensor Technologies (AST), TE Connectivity, TE Connectivity (logo) and EVERY CONNECTION COUNTS are trademarks. All other logos, products and/or company names referred to herein might be trademarks of their respective owners.

The information given herein, including drawings, illustrations and schematics which are intended for illustration purposes only, is believed to be reliable. However, TE Connectivity makes no warranties as to its accuracy or completeness and disclaims any liability in connection with its use. TE Connectivity's obligations shall only be as set forth in TE Connectivity's Standard Terms and Conditions of Sale for this product and in no case will TE Connectivity be liable for any incidental, indirect or consequential damages arising out of the sale, resale, use or misuse of the product. Users of TE Connectivity products should make their own evaluation to determine the suitability of each such product for the specific application.

© 2016 TE Connectivity Ltd. family of companies All Rights Reserved.