



# **DSD** xx10.01 .02 AxV

# DIFFERENTIAL HALL EFFECT SPEED SENSOR

## **Product ID**

Type #	Product #	Drawing #
DSD 1210.01 ATV	374Z-04059	110829d-1
DSD 1210.01 AHV	374z-04163	110829d-1
DSD 1410.01 ATV	374z-04164	111499d-1
DSD 1410.01 AHV	374Z-04165	111499d-1
DSD 1610.01 ATV	374Z-04166	111500d-1
DSD 1610.01 AHV	374Z-04167	111500d-1
DSD 1810.01 ATV	374Z-04168	110830d-1
DSD 1810.01 AHV	374Z-04169	110830d-1
DSD 2210.01 ATV	374Z-04170	110831d-1
DSD 2210.01 A1TV	3742607347	110831d-1
DSD 2210.01 AHV	374Z-04171	110831d-1
DSD EH10.02 AHV	374Z-05627	114609

#### General

Function

The sensors DSD xx10.01 .02 AxV sensors are suitable, in conjunction with a pole wheel, for generating square wave signals proportional to rotary speeds. They have a static behavior, so that pulse generation is guaranteed down to a speed corresponding to a frequency of 0 Hz. The monitoring elements consist of an magnetically biased differential hall effect semiconductor.

The differential structure requires that the sensor must be oriented

#### Technical data

Supply voltage	8 VDC to 30 VDC, protected against transient over voltages
Current consumption	Max. 18 mA (without load)

Signal output	<ul> <li>Square wave signal</li> <li>Push-pull outputs: Imax = ± 20 mA         <ul> <li>with pull-up resistor (for I= Imax): U low &lt; 2.5 V, U high &gt; 0.95 * U supply</li> <li>with pull-down resistor (for I= Imax): U low &lt; 0.1 V, U high &gt; Usupply-4.0</li> </ul> </li> <li>The outputs are short circuit proof and protected against reverse polarity.</li> </ul>	
Frequency range	0 Hz 20 kHz	
Electromagnetic compatibility (EMC):	With cable shield connected to the supply negative pole. Noise generator between housing and electronics  1.5 kV/1.5 µs/max.5Hz (Source resistance 500 Ohm)  2.0 kV/HF-Bursts (Level 4 in accordance with IEC 801-4)  2.5 kV/1 MHz damped resonance (Class III in accordance with IEC 255-4)	
Housing	Stainless steel 1.4305, front side sealed hermetically and resistant against splashing water, oil, conducting carbon- or ferrous dust and salt mist. Electronic components potted in chemical and age proof synthetic resin. Max. allowable pressure on sensor head: 10 bar Dimensions according to drawing.	
Mounting torque (max.)	12 Nm for M12x1 25 Nm for M14x1 35 Nm for M16x1 50 Nm for M18x1 75 Nm for M22x1	

## Connector

Sensor Type	Jaquet Part Number of Connector
DSD 1210.01 ATV	820A-35922
DSD 1210.01 AHV	820A-35922
DSD 1410.01 ATV	820A-35731
DSD 1410.01 AHV	820A-35731
DSD 1610.01 ATV	820A-35731
DSD 1610.01 AHV	820A-35731
DSD 1810.01 ATV	820A-35731
DSD 1810.01 AHV	820A-35731
DSD 2210.01 ATV	820A-35731
DSD 2210.01 A1TV	820A-35731
DSD 2210.01 AHV	820A-35731
DSD EH10.02 AHV	820A-36584

Jaquet Connector Code	Connector
820A-35731	Lemo ERA-2S-304 CLL Operating temperature: -55°C to+ 250°C Plug-and-socket connection: IP50
820A-35922	Lemo ERA-0S-304 CLL Operating temperature: -55°C to+ 250°C Plug-and-socket connection: IP50
Escha EWAS4, 4 pole connector, M12x1, material PA66-G25, male plug, gold plated pins Operating temperature: -55°C to+ 125°C Plug-and-socket connection: IP67	

Accessories	According dimensional drawing.  Toothed wheel of a magnetically permeable material (e.g. Steel 1.0036) Optimal performance with  Involute gear  Tooth width > 10 mm  Side offset < 0.2 mm  Eccentricity < 0.2 mm	
Requirements for pole wheel		
Air gap between sensor and pole wheel	Air gap between pole wheel (involute gear) and sensor housing:  • Module 1: 0.10.5 mm  • Module 2: 0.11.3 mm  • ≥ Module 4: 0.11.5 m	
Insulation	Housing and electronics galvanically separated (500 V/50 Hz/ 1 min)	
Protection class	IP68 (head) and connector according to list	
Vibration immunity	5 g in the range of 5 2000 Hz Shock	
shock immunity Temperature	50 g for 20 ms, half sine wave  Operating temperature of entire sensor:  Version T: -40° +85°C  Version H: -40° +125°C	

Further Informati	on	
Safety	All mechanical installations must be carried out by an expert.  General safety requirements have to be met.	
Connection	The sensors must be connected according to sensor drawing.  Sensor wires are susceptible to radiated noise. Therefore, the following points have to be considered when connecting a sensor:  The sensor wires must be laid as far as possible from large electrical machines. They must not run parallel in the vicinity of power cables.  The maximum permissible cable length is dependent upon the sensor voltage, the cable routing, along with cable capacitance and inductance. However, it is advantageous to keep the distance between sensor and instrument as short as possible. The sensor cable may be lengthened via a terminal box located in an IP20 connection area in accordance with EN 60529.	
Installation	The sensor has to be aligned to the pole wheel according to the sensor drawing independent of its rotational orientation. Deviations in positioning may affect the performance and decrease the noise immunity of the sensor. During installation, the smallest possible pole wheel to sensor gap should be set. The gap should however, be set to prevent the face of the sensor ever touching the pole wheel. The amplitude of the output signal is not influenced by the air gap.  A sensor should be mounted with the middle of the face side over the middle of the pole wheel. Dependent upon the wheel width, a certain degree of axial movement is permissible. However, the middle of the sensor must be at minimum in a distance of 3 mm from the edge of the pole wheel under all operating conditions.  A solid and vibration free mounting of the sensor is important. Eventual sensor vibration relative to the pole wheel can induce additional output pulses.  The sensors are insensitive to oil, grease etc. and can be installed in arduous conditions. Within the air gap specified the amplitude of the output signals is not influenced by the air gap	
Maintenance	Product cannot be repaired	
Transport	Product must be handled with care to prevent damage of the front face.	
Storage	Product must be stored in dry conditions. The storage temperature corresponds to the operation temperature.	
Disposal	Product must be disposed of properly; it must not be disposed as domestic waste.	

#### **CONTACT US**

Tel +41 61 306 8822 jaquet.info@te.com

#### te.com/sensor solutions

JAQUET, TE Connectivity, and TE connectivity (logo) are trademarks. All other logos, products and/or company names referred to herein might be trademarks of their respective owners.

The information given herein, including drawings, illustrations and schematics which are intended for illustration purposes only, is believed to be reliable. However, TE Connectivity makes no warranties as to its accuracy or completeness and disclaims any liability in connection with its use. TE Connectivity's obligations shall only be as set forth in TE Connectivity's Standard Terms and Conditions of Sale for this product and in no case will TE Connectivity be liable for any incidental, indirect or consequential damages arising out of the sale, resale, use or misuse of the product. Users of TE Connectivity products should make their own evaluation to determine the suitability of each such product for the specific application.

© 2017 TE Connectivity Ltd. family of companies All Rights Reserved.

