

Seating Tool Kit	XFP Cage Assembly Configuration	Application Specification
2185201-1	1 X 1	114-13120
2185201-2	1 X 1 with Heat Sink	
2185201-3	1 X 1 with Heat Sink	
2185201-4	1 X 1 with Heat Sink	
1-2185201-0	1 X 1	
2-2185201-0	1 X 1 with Heat Sink	
3-2185201-0	1 X 1 with Heat Sink	
4-2185201-0	1 X 1 with Heat Sink	

Figure 1

## 1. INTRODUCTION

XFP surface mount PT connector and cage assembly seating tool kits listed in Figure 1 are used to seat the cage assemblies described in Figure 1 onto the pc board. The cage assembly contains compliant pin contacts to allow solderless pc board installation. The seating tool is not designed to seat the connector.

Read these instructions thoroughly before using the seating tool kit.



**NOTE**

Dimensions on this sheet are in metric units [with U.S. customary units in brackets]. Figures and illustrations are for reference only and are not drawn to scale.

## 2. DESCRIPTION (Figure 1)

Each seating tool kit consists of a seating tool and a wall support. The seating tool and wall support are also available separately. The seating tool has cutouts (two located on each side) to accept the protruding part of the standoffs of the cage assembly. The wall support must be installed into the ports of the cage assembly.

The top of the seating tool provides a surface to accept the force applied by the application tool to seat the product onto the pc board. During seating, the back and sides of the seating tool protect the cage assembly from damage. The wall support supports the individual ports of the cage assembly.

### 3. REQUIREMENTS

#### 3.1. PC Board Support Fixture (Customer Supplied)

A pc board support must be used to provide proper support for the pc board and to protect the pc board and the connector and cage assembly from damage. The support fixture must be designed for specific needs using the following recommendations:

- Should be at least 25.4 mm [1 in.] longer and wider than the pc board
- Should have flat surfaces with holes or a channel large enough and deep enough to receive any protruding components of the product

#### 3.2. Application Tool

Power for seating tools must be provided by an application tool (with a ram) capable of supplying a downward force of 44.5 N [10 lb-force] per contact. For available application tools, call PRODUCT INFORMATION at the number at the bottom of page 1.



**CAUTION**

Over-driving of the cage assembly will deform parts critical to the quality of the connection. Maximum force occurs prior to the cage assembly bottoming on the pc board.

### 4. SETUP

When setting up equipment to seat the cage assembly, pay particular attention to the following:

- the seating tool must be matched to the cage assembly



**CAUTION**

If seating tool / cage assembly are mismatched or improperly aligned, damage could occur to tooling, cage assembly, or both.

- Light pipes **MUST NOT** be assembled onto the cage assembly
- The wall support must be properly installed, and the seating tool, cage assembly, and application tool ram must be properly aligned before cycling the application tool

1. Set the tool seating height to the dimension shown in Figure 2 (application tool shut height will equal the tool seating height PLUS the combined thicknesses of the pc board and support fixture).

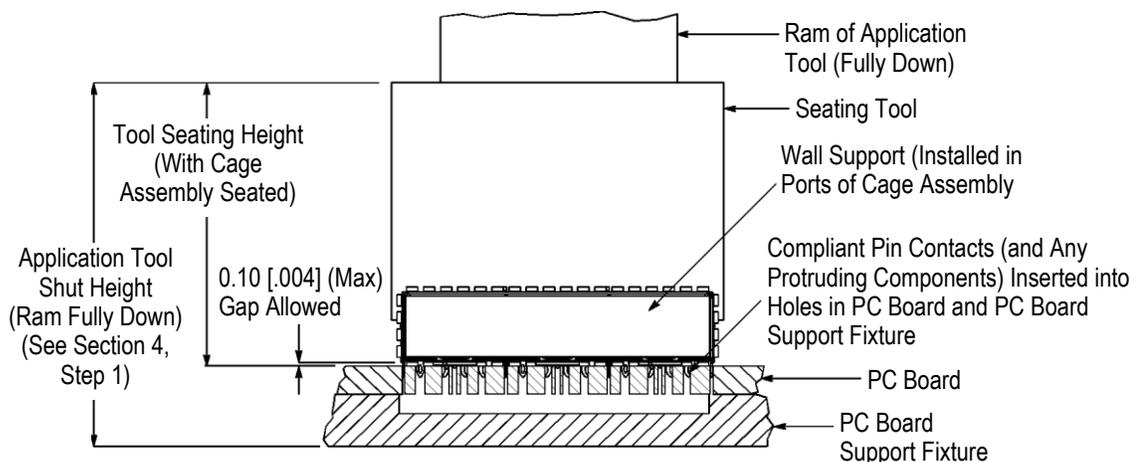


Figure 2

After seating, no more than 0.10 mm [.004 in.] gap is allowed between cage assembly standoffs and pc board.



**NOTE**

Use the tool seating height as a reference starting point. This height may need to be adjusted to obtain the amount allowed (maximum of 0.10 mm [.004 in.]) between the standoffs of the cage assembly and the pc board.

2. Slide the wall support into the ports of the cage assembly until the wall support is secure.

## 5. SEATING (Figure 2)



### NOTE

The connector must be mounted on the pc board **BEFORE** seating the cage assembly.

1. Place the pc board on the support fixture.
2. Orient the seating tool over the cage assembly so the back is aligned with the back of the cage assembly. Then lower the seating tool onto the cage assembly, making sure the cutouts slide over the protruding components of the cage assembly until the seating tool bottoms on the top of the cage assembly.
3. Place the cage assembly on the pc board so that the contacts and alignment posts are aligned and started into the matching holes in the pc board.
4. Center the seating tool (with the cage assembly) under the ram of the application tool. Slowly lower the ram until it just meets the seating tool. Verify alignment of pc board support, pc board, cage assembly, and seating tool.



### CAUTION

Damage to the pc board, seating tool, or cage assembly may occur if the seating tool is not properly seated on the cage assembly before cycling the application tool.

5. Cycle the application tool to seat the cage assembly on the pc board. Then retract the ram, and carefully remove the seating tool by pulling it straight from the cage assembly.
6. Check the cage assembly for proper seating according to the following:
  - The widest section of each compliant pin is inside its intended pc board hole
  - Each alignment post is in its intended pc board hole
  - If present, the gap between the standoffs and the pc board is no more than 0.10 mm [.004 in.]



### NOTE

For detailed application requirements of the cage assembly, refer to the application specification given in Figure 1.

## 6. MAINTENANCE AND INSPECTION

The seating tool kit is assembled and inspected before shipment. It is recommended that the seating tool kit be inspected immediately upon arrival at the facility of use to ensure that it has not been damaged during shipment, and that it conforms to the dimensions provided in Figure 3 (typical).

### 6.1. Daily Maintenance

TE recommends that each operator is made aware of and responsible for the following steps of daily maintenance:

- Remove dust, moisture, and contaminants with a clean, soft brush or a lint-free cloth. **DO NOT** use objects that could damage the components.
- When the seating tool and wall support are not in use, store them in a clean, dry area.


### 6.2. Periodic Inspection

Regular inspections should be performed by quality control personnel. A record of scheduled inspections should reside with the seating tool or be supplied to personnel responsible for the seating tool kit. Inspection frequency should be based on amount of use, working conditions, operator training and skill, and established standards.

### 7. REPLACEMENT AND REPAIR


Customer-replaceable parts are listed in Figure 4. Parts other than those listed should be replaced by TE to ensure quality and reliability. For customer repair service or to order replacement parts, call 1-800-522-6752, or fax your purchase order to 717-986-7605, or write to:

Customer Service (038-035)  
 TE CONNECTIVITY Corporation,  
 PO Box 3608,  
 Harrisburg, PA 17105-3608

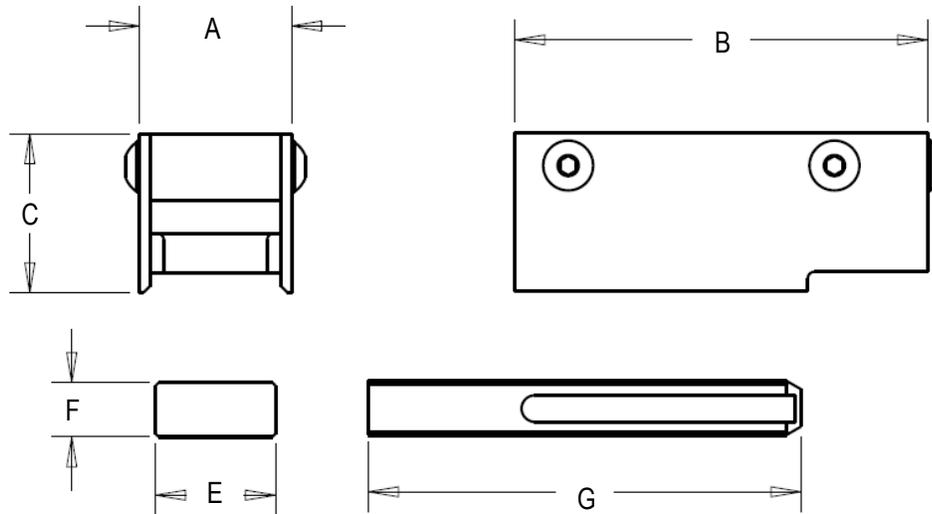

Seating Tool Kit / Cage Assembly Configuration	Dimension (mm [in.])					
	A	B	C	E	F	G
2185201-1 / 1 X 1	22.8 [.898]	62.0 [2.440]	23.9 [.941]	18.0 [.709]	8.2 [.323]	65.0 [2.559]
2185201-2 / 1 X 1 with Heat Sink	22.8 [.898]	62.0 [2.440]	28.1 [1.106]	18.0 [.709]	8.2 [.323]	65.0 [2.559]
2185201-3 / 1 X 1 with Heat Sink	22.8 [.898]	62.0 [2.440]	29.3 [1.153]	18.0 [.709]	8.2 [.323]	65.0 [2.559]
2185201-4 / 1 X 1 with Heat Sink	22.8 [.898]	62.0 [2.440]	29.3 [1.153]	18.0 [.709]	8.2 [.323]	65.0 [2.559]
1-2185201-0 / 1 X 1	22.8 [.898]	62.0 [2.440]	23.9 [.941]	---	---	---
2-2185201-0 / 1 X 1 with Heat Sink	22.8 [.898]	62.0 [2.440]	28.1 [1.106]	---	---	---
3-2185201-0 / 1 X 1 with Heat Sink	22.8 [.898]	62.0 [2.440]	29.3 [1.153]	---	---	---
4-2185201-0 / 1 X 1 with Heat Sink	22.8 [.898]	62.0 [2.440]	29.3 [1.153]	---	---	---

Figure 3

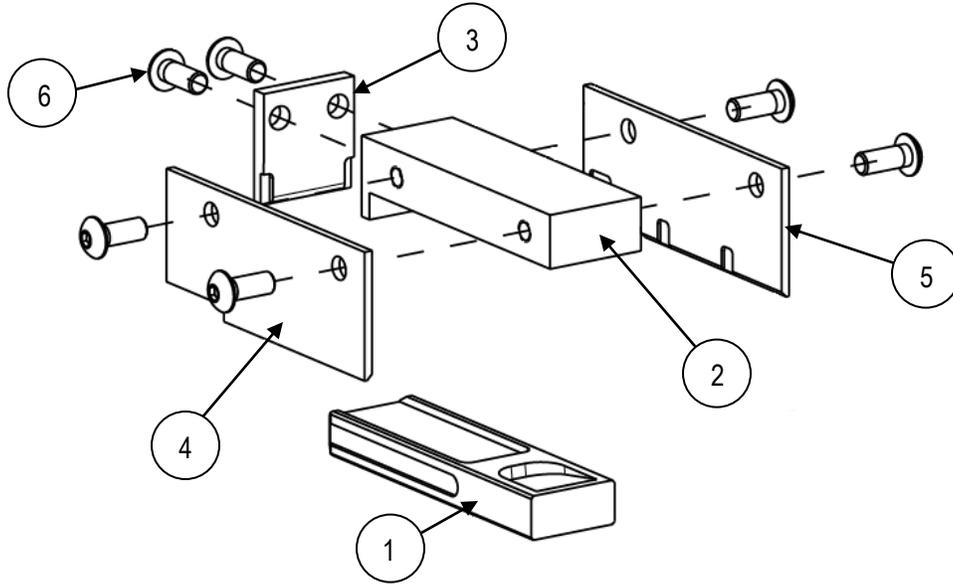

Replacement Parts			Number of Parts per Kit by Kit Number							
Item	Description	Part Number	2185201-1	2185201-2	2185201-3	2185201-4	1-2185201-0	2-2185201-0	3-2185201-0	4-2185201-0
1	Wall Support	2215934-1	1	1	1	1				
2	Center Block	2215930-1	1				1			
		2215930-2		1				1		
		2215930-3			1	1			1	1
3	Rear Plate	2215933-1	1				1			
		2215933-2		1				1		
		2215933-3			1				1	
		2215933-4				1				1
4	Left Side Plate	2215931-1	1				1			
		2215931-2		1				1		
		2215931-3			1				1	
		2215931-4				1				1
5	Right Side Plate	2215932-1	1				1			
		2215932-2		1				1		
		2215932-3			1				1	
		2215932-4				1				1
6	Screw, Btn Head Cap	18024-7	6	6	6	6	6	6	6	6

Figure 4

**8. REVISION SUMMARY**

- Updated with most up-to-date enterprise logo and name.
- Added Seating Tool Kits 2185201-2, 2185201-3, 2185201-4, 2-2185201-0, 3-2185201-0, 4-2185201-0
- Split Figure 3 into Figure 3 and Figure 4.