



# AMP\* RIBBON CABLE TOOLING ASSEMBLY 59820-1 FOR MASS TERMINATION ASSEMBLIES (MTA)



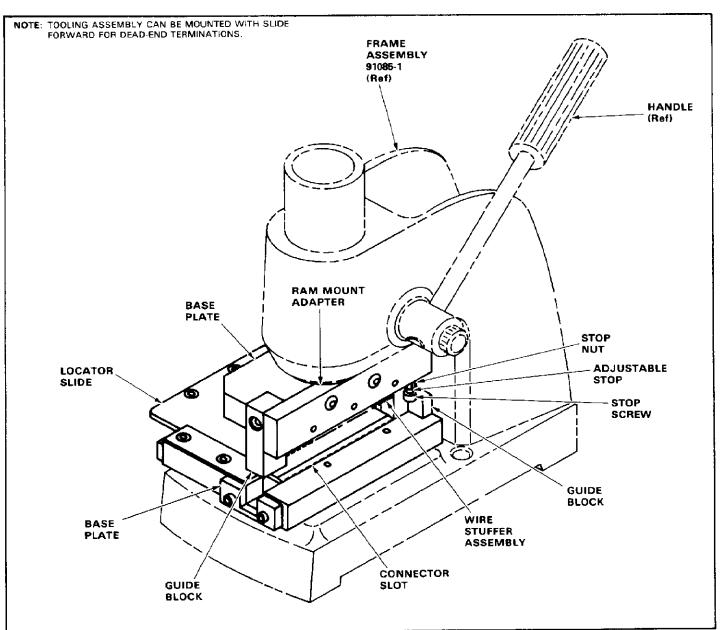


Fig. 1

## 1. INTRODUCTION

This instruction sheet (IS) covers the operation and maintenance of the AMP MTA Ribbon Tooling Assembly 59820-1 which terminates receptacle connectors with contact spacing on .156-in. centers.

Read these instructions thoroughly before starting.

NOTE

All dimensions on this sheet are in inches.

## 2. DESCRIPTION (Figure 1)

The tooling assembly is designed for use in the AMP

Frame Assembly 91085-1. It can also be used in the -2 frame assembly provided the base plate subassembly 126328-2 is removed.

Each tooling assembly consists of an upper and lower tooling subassembly. The upper tooling features a base plate, a ram mount adapter, a wire stuffer assembly, a guide block, and an adjustable stop. The lower tooling features a base plate, a locator slide, a connector slot, and a guide block. The function of these features will be described in the following procedures.

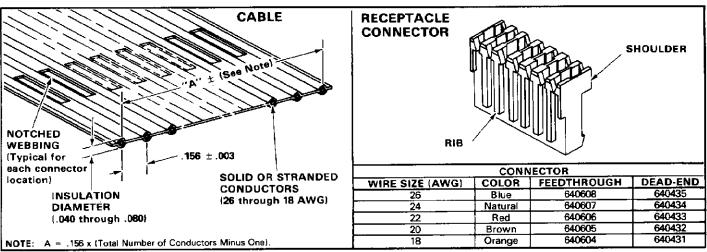


Fig. 2

## 3. CABLE REQUIREMENTS

The tooling assembly will terminate ribbon cable with No. 26 through 18 AWG solid or stranded conductors to receptacle connectors. See Figure 2 for the recommended cable dimensions and connector base part numbers.

CAUTION

The cable end must be cut 90° to the edge of the cable, otherwise, an improper termination will result. We suggest you use a guillotine type cable cutter such as the Carpenter Model 95 which can be purchased from:

Carpenter Manufacturing Co., Inc. Fairgrounds Drive Manlius, NY 13207

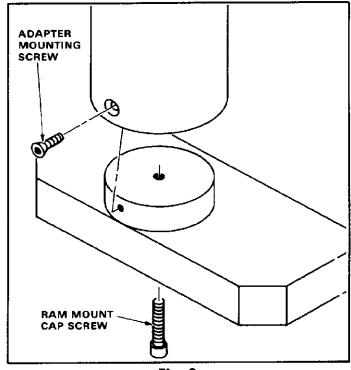


Fig. 3

## 4. SETUP PROCEDURE (Figures 3 and 4)

NOTE

The tooling assembly is designed for use in the 91085-1 frame assembly. If you have the 91085-2 frame assembly, convert it to a -1 by removing the base plate subassembly 126328-2.

- 1. Loosen the cap screw securing the ram mount adapter to the base plate just enough to allow the adapter to move freely.
- 2. Remove the two adapter mounting screws that are used to secure the adapter in the ram.
- 3. Remove the two lower base mounting screws from the lower tooling base plate.
- 4. Mate the upper and lower tooling and place it on the base plate of the frame assembly.

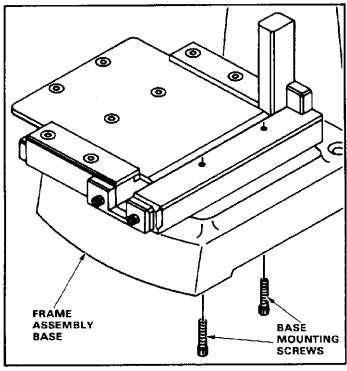


Fig. 4

#### AMP MTA 156 RIBBON CABLE TOOLING 59820-1

- 5. Align the adapter mounting holes and thread the two adapter mounting screws in until secured.
- 6. Start, but do not tighten, the two lower base mounting screws.
- 7. Secure ram mount cap screw in the center of the adapter.
- 8. Cautiously rotate frame assembly handle forward and mate the upper tooling with the lower tooling.
- 9. Place the back side of the frame assembly on workbench and, with the tooling stop bottomed on the lower tooling, secure the two base plate mounting screws.
- 10. Operate the frame assembly handle through a complete cycle and check to be sure guides enter slots without too much drag. If excessive drag is apparent, re-adjust lower tooling.

This completes setup for termination of all connectors listed in Figure 2.

#### 5. TERMINATING PROCEDURE

Go through these procedures with a sample connector and inspect termination as described in AMP MTA 156 Product Specification 114-1020. After you are satisfied with the inspection, terminate production connectors as follows.

1. Determine the number of contact positions needed for your application, then refer to Figure 2 for cable and connector requirements.

- 2. Cut cable leading edge 90 degrees to the cable edge.
- 3. Determine cable termination position and remove webbing between conductors at this position with AMP Notching Tool 59835-1. See Figure 2.
- 4. Pull locator slide outward and insert connector then slowly release slide while guiding connector ribs into slide grooves. See Figure 5.
- 5. Position cable over connector make sure it is properly aligned, then rotate handle forward until tool stop bottoms.
- 6. Return the tool handle to starting position and remove the terminated connector.

NOTE

If wire is inserted too deep or too shallow, loosen stop nut and readjust stop screw — turn it COUNTERCLOCKWISE to increase insertion depth and CLOCKWISE to decrease insertion depth (1/4 turn equals .008 inch).


## 6. TOOL CERTIFICATION

The procedures described in the following text have been established to assure quality and reliability of AMP terminating tools. A brief check should be made daily, and a more detailed inspection should be scheduled by your quality control group.

## A. Daily Maintenance

Each operator should be aware of, and responsible for the following:

Remove dust, moisture, and other contaminants with a clean brush, or soft, lint-free cloth.
Do NOT use objects that could damage the tool.

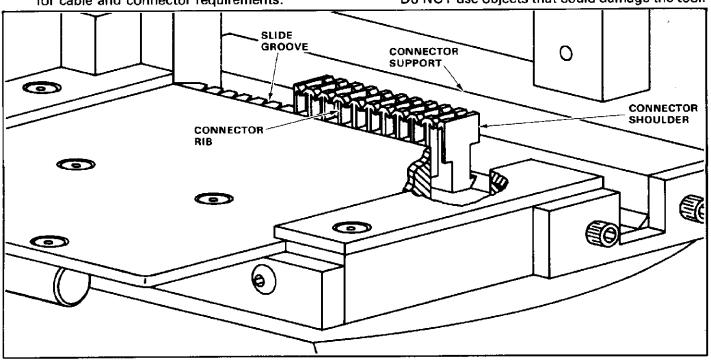

## AMP MTA 156 RIBBON CABLE TOOLING 59820-1

- 2. Make sure all components are in place and properly secured. (If NOT, return the tools to your supervisor.)
- 3. Rotate the frame assembly handle forward to be sure ram moves smoothly.
- 4. Check to be sure the locator slide moves freely.
- Check to be sure all screws are secured.

## B. Quality Control Maintenance

Regular inspections should be performed by your quality control personnel with a record of quality control inspections remaining with the personnel responsible for the tool. We recommend one inspection a month; however, operator training and skill, amount of use, ambient working conditions, and your company's established standard are all factors in establishing inspections.

These inspections should be done in the following sequence:

 Remove any accumulated film with a suitable cleaning agent that will NOT affect polycarbonate plastic material.

- Make sure all components are in place and properly secured. See Figure 6.
- 3. Make a few test terminations and inspect them in accordance with AMP MTA 156 Product Specification 114-1020.
- 4. Check for chipped, cracked, worn, or broken areas. If damage is evident, repair is necessary. See Paragraph 7, REPAIR.

## 7. REPAIR

Customer replaceable parts are listed in Figure 6. A complete inventory should be stocked and controlled to prevent lost time when replacement is required.

Parts other than those specified in Figure 6 must be replaced by AMP to insure certification of the tool. When repair by AMP is necessary, return the tool with a written description of the problem to:

AMP Incorporated Customer Repair 1523 North 4th Street Harrisburg, Pennsylvania 17105

or a wholly owned subsidiary of AMP Incorporated.

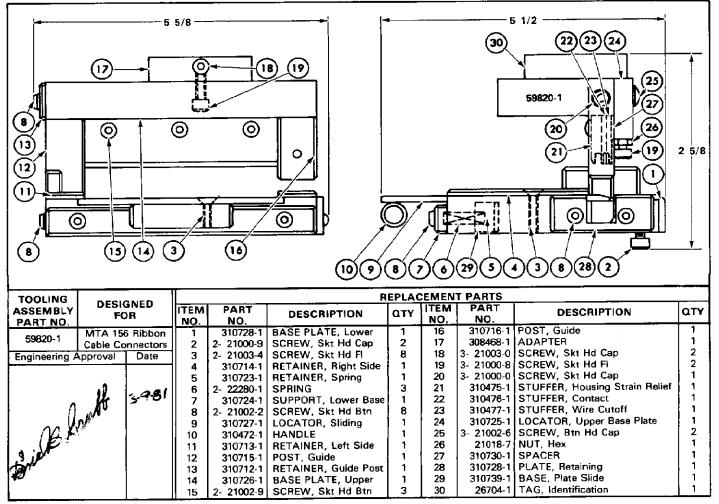


Fig. 6