



DANGER

To avoid injury when using DYNA-CRIMP equipment:*

- Read, understand and follow the operating instructions packaged with the head and associated equipment.
- Do NOT modify the crimping equipment in any way.
- Use only dies, terminals, and wire specified for the head.
- Use this head only with the hydraulic power unit or foot pump recommended by TE Connectivity (TE).
- Use DYNA-CRIMP equipment only in the operating condition specified by TE.
- Do NOT perform repairs other than those specified in the instructional material supplied with the equipment.
- When using hydraulic crimp heads. Head is extremely heavy. Handle with care when using device above floor level. Take steps to avoid head dropping or falling.