

# Installation/uninstallation instruction for Dynamic D1000 Tab Housing Panel Type

## 1. INTRODUCTION

This Instruction Sheet explains the method to installation/uninstallation the connector onto the panel for Dynamic D1000 Tab housing Panel type.

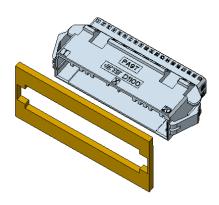


Fig 1 Panel mounting

Note: The fig for example with D1100 40Pos (Part Number: 1-2350416-0)

# 2. APPLICABLE PRODUCTS

Series Number	Part Number	Description
D1100	1-1903128-1	Dynamic D1100 22Pos. X key, tab housing Panel type
D1100	1-1903128-3	Dynamic D1100 26Pos. X key, tab housing Panel type
D1100	1-1903128-4	Dynamic D1100 28Pos. X key, tab housing Panel type
D1100	1-1903128-6	Dynamic D1100 32Pos. X key, tab housing Panel type
D1100	1-1903128-7	Dynamic D1100 34Pos. X key, tab housing Panel type
D1100	1-1903128-0	Dynamic D1100 40Pos. X key, Tab housing Panel type
D1100	1-2350416-0	Dynamic D1100 40Pos. X key, tab housing Panel type,
		high contact retention force
D1200	1-1903131-2	Dynamic D1200 4Pos. X key, tab housing Panel type
D1200	1-1903131-3	Dynamic D1200 6Pos. X key, tab housing Panel type
D1200	2-1903131-3	Dynamic D1200 6Pos. Y key, tab housing Panel type
D1200	2-1939796-3	Dynamic D1200 6Pos. X key, nature, tab housing Panel type
D1200	1-1903131-4	Dynamic D1200 8Pos. X key, tab housing Panel type
D1200	2-1939131-4	Dynamic D1200 8Pos. Y key, tab housing Panel type
D1200	1-1939131-6	Dynamic D1200 12Pos. X key, tab housing Panel type
D1200	1-1939131-0	Dynamic D1200 20Pos. X key, tab housing Panel type
D1200	2-1903131-0	Dynamic D1200 20Pos. Y key, tab housing Panel type

Table 2 Reference Document



## 3. INSTALLATION PROCEDURE

Install the housing onto the panel in the follow procedure.





Fig 2 Mounting condition see from the top

When installing the product onto designated panel, hold the housing body, then push into the panel with right angle (Fig 2).

#### **Caution:**

- ❖ Do not pinch the lock level, when installation the housing onto the panel (Fig 3).
- Push the unfixed side to install the product (Red arrow), in case the product has been insert into the panel with tilted (Fig 4).

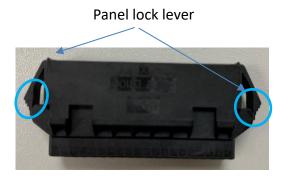


Fig 3 Housing For Panel Mount Type



Fig 4 Mounting condition with tilt

Rev.A 2 of 3



## 4. UNINSTALLATION PROCEDURE

#### When uninstalling the product from the panel

- 4.1 Press the lock level, until the level pulled out of the panel, fig 5.
- 4.2 When the connector tilt on the panel, please press the lock level, until connector pulled out, fig 6.





Fig 5 uninstalling connector from panel

Fig 6 uninstalling tilt connector from panel

#### Caution:

- Please do not press on the beam (Red arrow) of the level during the uninstalling process, as fig 6 shown.
- During the uninstallation process, do not apply unnecessary force when the lock level touch the bottom surface, as fig 7 shown.

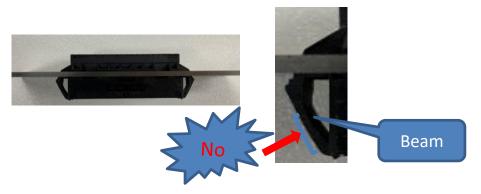


Fig 6 Housing For Panel Mount Condition

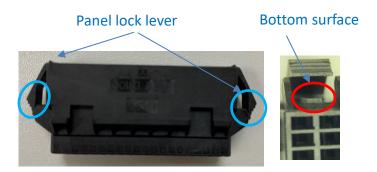


Fig 7 Housing For Panel Mount Type

Rev.A 3 of 3