

Multi-Interlock Mark II Contact From Plug & Cap HSG
MIC Mark II プラグ 及び キャップ ハウジング 用コンタクト引抜工具(PN753787-1)

Contents

First 1 pages following this top sheet : English version
Next 1 pages : Japanese version

When only one of above versions is supplied to customers, this top sheet shall be attached.

目次

このシートに続く最初の 1 ページ : 英語版
次の 1 ページ : 日本語版

カスタマーに英語または日本語版の片方のみを提出する場合は、このトップシートが必ず添付されなければならない。

Revision Record (改訂記録)

Revision Letter (改訂記号)	EC number (改訂記録番号)	Date (日付)
O1	FJ00-0001-00	05 JAN 2000

Outline of the latest revision (最新改訂の概要)

Combine two language versions into one document. No change was made on product specification.

2ヶ国語の文書を一括管理とした。仕様内容に変更なし。

AMP

AMP EXTRACTION TOOL P/N 753787-1
FOR EXTRACTING MULTI-INTERLOCK MARK II CONTACT
FROM (MIC) PLUG &, CAP HOUSING

411-5219

(WAS IS-219J)

日本イー・エム・ピー株式会社

AMP (Japan), Ltd.

INSTRUCTION


SHEET

RELEASED

17NOV82

REV. 01

5 JAN 00

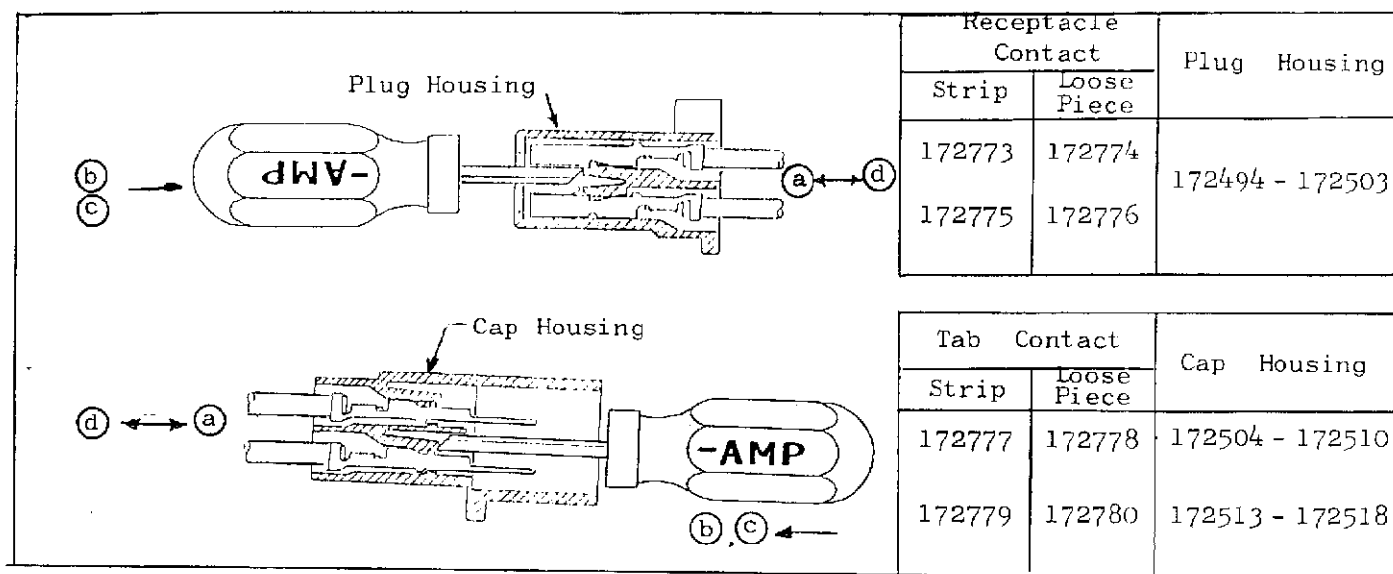**1. INTRODUCTION:**

This instruction sheet provides procedures for extraction and maintenance of AMP extraction tool P/N 753787-1 for extracting Multi-interlock contacts from MIC Mark II plug and cap housings as shown in Fig. 1.

Read this material carefully, before you start operation.

2. CONTACT EXTRACTION PROCEDURE:

- Push back the wire of contact you are to extract from the wire side of housing into the cavity lightly, so that tip end of housing lance is made relaxed becoming ready to unlock the contact in housing.
- Insert tip end of extraction tool from the connector mating side into the cavity of the contact you intend to remove, until it stops naturally in the cavity of housing. Insert tool straight and lightly. Do not apply it forcibly or twistingly, lest it should result damage of housing.

- With the tip end stopping in the cavity of housing, housing lance is made to move up, unlocking the contact automatically. The contact is now ready to be removed.

- Pull back the wire of contact lightly, and the contact can be removed. If the contact stays being stuck within cavity, repeat applying the tool end correctly once over until the contact is made unlocked. Do not attempt to remove forcibly when the contact appears stuck.

3. MAINTENANCE:

This tool has been designed exclusively for removing appropriate contacts as specified above. Do not use the tool for the purposes other than designated to assure the tool in good condition allowing long life of use for operation. When not in use, remove particles by wiping, and keep in clean dry place.

AMP

MIC MARK II プラグ及びキャップハウジング用

411-5219

(WAS IS-219J)

日本イー・エム・ピー株式会社


コンタクト引抜工具(型番 753787-1)

取扱説明書

AMP (Japan), Ltd.

RELEASED 17NOV82

REV. 01 5 JAN 80

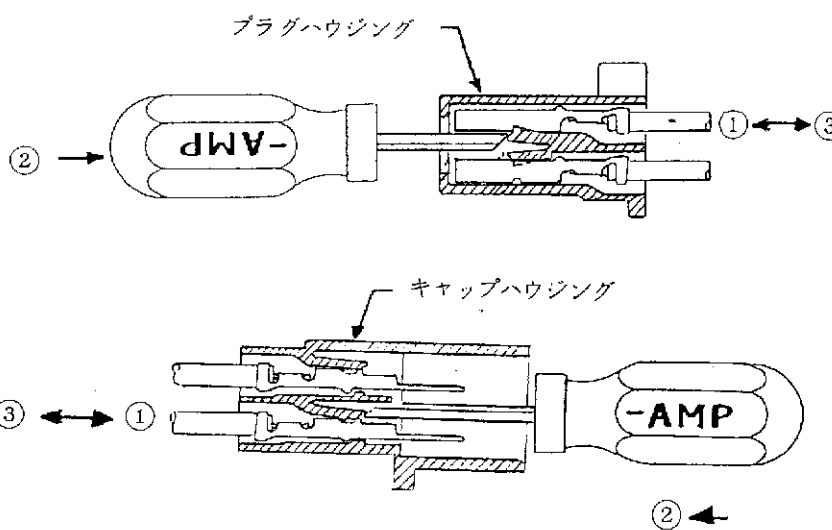

リセコンタクト		プラグハウジング
連続	バラ	
172773	172774	172494 - 172503
172775	172776	

タブコンタクト		キャップハウジング
連続	バラ	
172777	172778	172504 - 172510
172779	172780	172513 - 172518

はじめに

本工具は、MIC MARK II リセおよびタブコンタクトをプラグおよびキャップハウジングから引抜くために設計されたものです。

ご使用前に本書をよくお読み下さい。

コンタクト引抜き方法

- ① 引抜こうとするコンタクトの電線側から電線をつまんで奥に押し込みます。すると、ハウジングランスの先端が浮き上って動き易くなります。
- ② 工具の先端を図の様に水平にして、コネクタの嵌合側から、コンタクト穴に挿入し先端が奥に突き当たって止るまで軽く押し込んで下さい。

これでハウジングランスが固定位置から押し上(下)げられてロックが解放されます。

- ③ コンタクトを電線側から引くと、コンタクトは抜け出てきます。抜けぬ時は無理に抜かず①、②をくり返して下さい。

取扱上のご注意

本工具は、コンタクト引抜用に合った寸法に作つてある引抜工具です。他の目的に使わないで下さい。