

図 1 / Fig.1 引抜工具(Extraction Tool)

1. はじめに

本取扱説明書は、0.64Ⅲ・リセコンタクトをハウジングから引抜く際に使用する引抜工具(型番1729375-1)の取扱について説明するものです。

作業の前に必ずお読み下さい。

2. 適用コンタクトおよびハウジング型番

1. INTRODUCTION

This Instruction Sheet explains the handling of the extraction tool (P/N1729375-1) used in case 0.64Ⅲ receptacle contact is extracted from a housing.

READ THIS MANUAL CAREFULLY BEFORE OPERATION

2. APPLICABLE CONTACT AND HOUSING PART NO.,

表 1 / TABLE 1

コンタクト型番 Contact PN	プラグハウジング型番 Plug Housing PN	Description
1674936-X 1674311-X	1674919-X	0.64Ⅲ/1.0 31P
	1674922-X	0.64Ⅲ/1.0 32P
	1674925-X	0.64Ⅲ/1.0 34P
	1674558-X	0.64Ⅲ/1.0 35P A
	1674928-X	0.64Ⅲ/1.0 35P B
	1746864-X	0.64Ⅲ/2.3Ⅱ 24P
	1746863-X	0.64Ⅲ/2.3Ⅱ 26P
	1746865-X	0.64Ⅲ/2.3Ⅱ 30P
	1674932-X	0.64Ⅲ/2.3Ⅱ 26P
	1717103-X	0.64Ⅲ 8P
	1717106-X	0.64Ⅲ 12P
	1746872-X	0.64Ⅲ 12P Short Body
	1717109-X	0.64Ⅲ 16P
	1717112-X	0.64Ⅲ 24P
	1717115-X	0.64Ⅲ 28P
	1717118-X	0.64Ⅲ 32P
	1674312-X	0.64Ⅲ 40P
	1746875-X	0.64Ⅲ 8P 1Row
	1939605-1	0.64Ⅲ/2.3TW20P

3. 手順

3. Procedure

3.1 リテーナの確認

3.1 Confirming the retainer position.

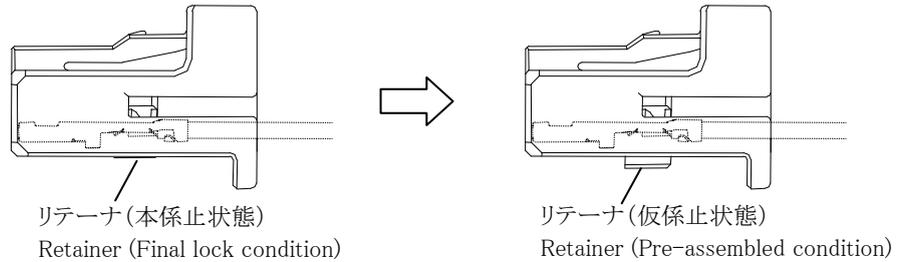


図 2 / Fig.2

コンタクトの引き抜き作業の前に、まずリテーナが仮係止状態になっていることを確認して下さい。本係止状態になっている場合は仮係止状態にして下さい。(→図 2 参照)

本係止状態では、コンタクトを引き抜くことが出来ません。

Please confirm the retainer is in pre-assembled condition. If the retainer is final lock condition, it should be changed to pre-assembled condition.

See Fig.2.

The contact can not be extracted in final lock condition.

3.2 コンタクトの引き抜き

3.2 Contact extraction

工具先端をハウジングの工具挿入部へ、図 3 に示す向きにまっすぐ突き当たるまで挿入して下さい。

その状態で電線を引張り、端子を引き抜いてください。(→図 4 参照)

Insert the tip of tool in the direction shown in Fig.3 into the insertion slot of housing straightly until it stops.

Hold a wire in this condition and extract a contact.

See Fig.4

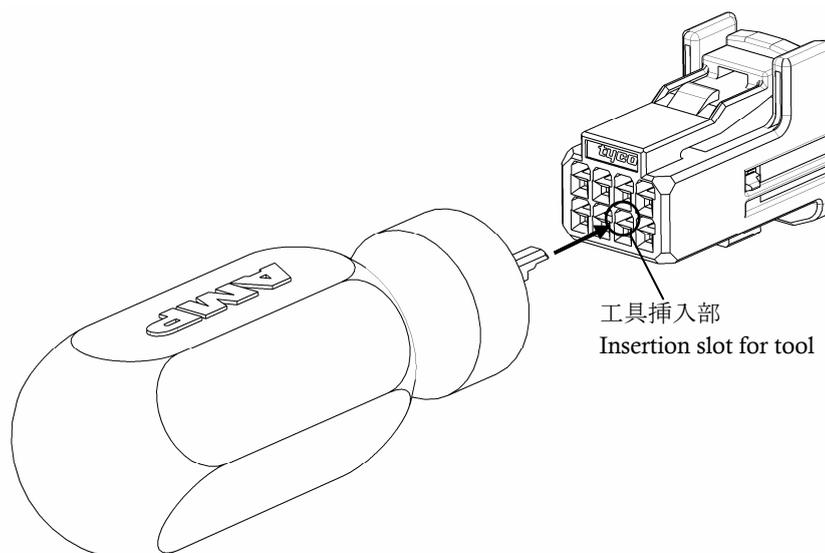


図 3 / Fig.3

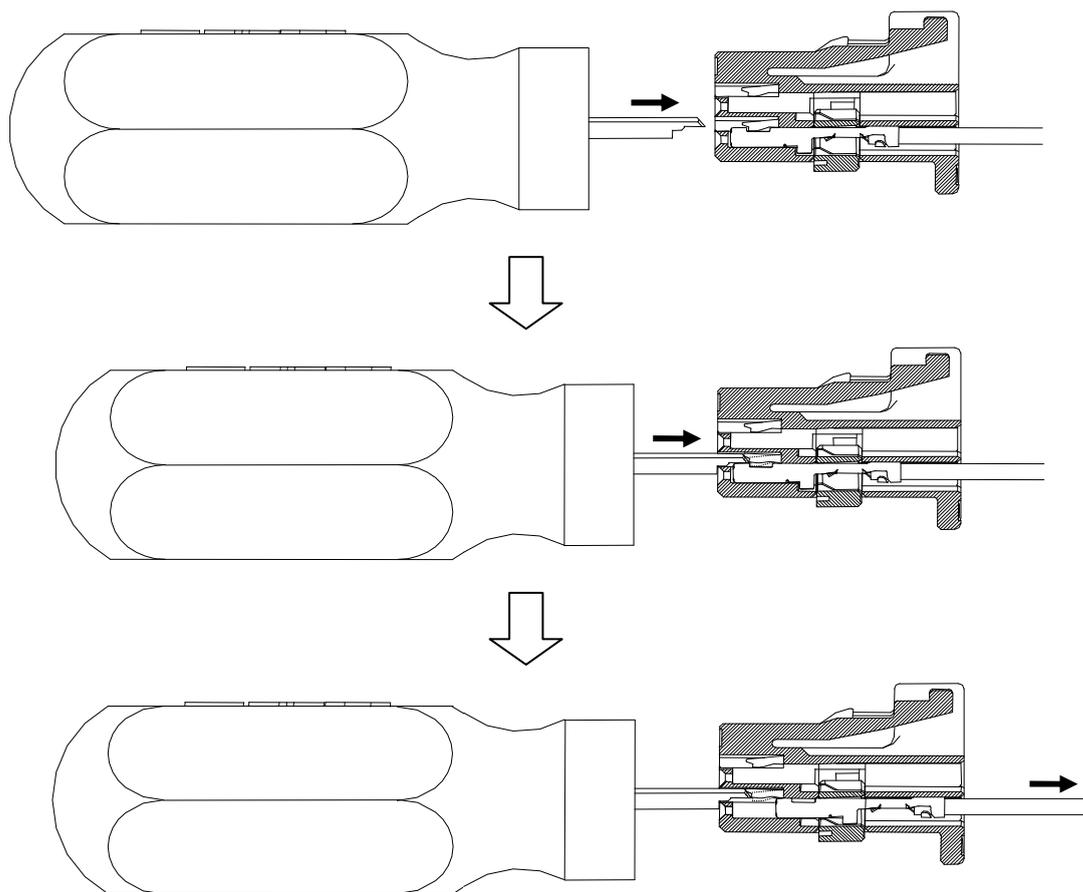


図 4 / Fig.4

注記

引抜いたコンタクトを再使用する場合はコンタクトに異常がないか確認し、異常があれば使用しないで下さい。

工具を挿入するだけでハウジングランスは解除されます。工具をこじるとランスや工具を傷めますのでこじらないで下さい。

端子カゴリ部には絶対に挿入しないで下さい。挿入した場合は必ず新しい端子と取り替えて下さい。

Notes

When a case of extracted contact, make sure that there no damage on the contact. If the contact is damaged, DO NOT reuse.

Contact lance could be released by just inserting the extraction tool. Do not apply excess force when you push in the tool into housing. Housing lance and/or tool may be damaged.

Do not insert the extraction tool into contact. The contact may be damaged and must be replaced with new one.