




AMP INCORPORATED
HARRISBURG, PA., U.S.A.

A-MP STRAIN RELIEF CLAMP
CATALOG NO. 200730
FOR A-MP 75 POSITION
SERIES "M" CONNECTOR

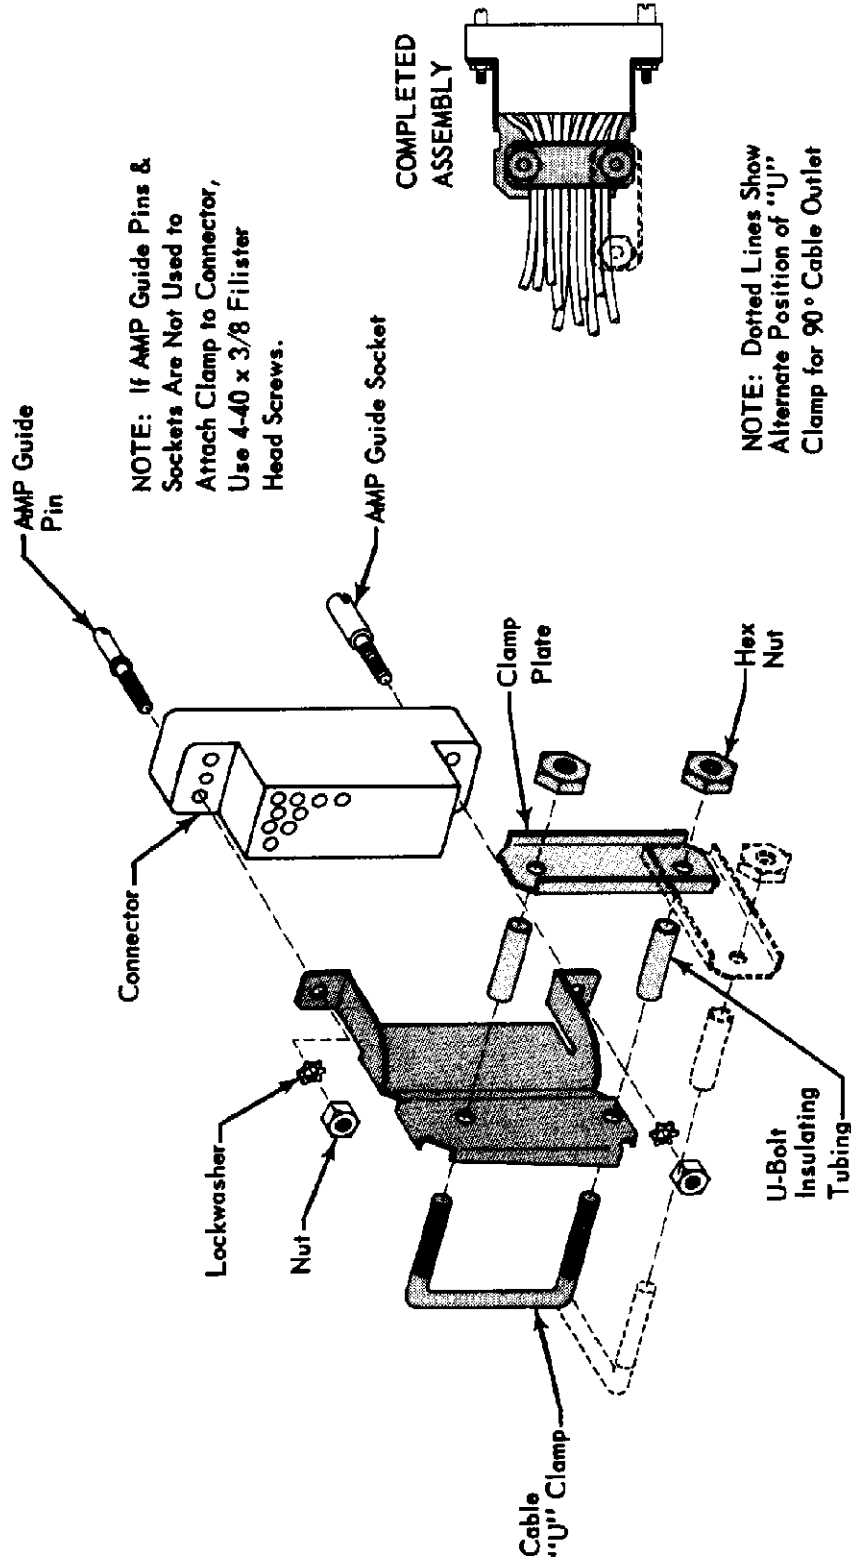

ASSEMBLY INSTRUCTIONS

1. Assemble Clamp as shown. Do not tighten "U" Clamp Nuts.
2. Bundle Cable so that it will pass thru "U" Clamp.
3. Slide Assembly over Cable until it butts against Connector.
4. Draw all Cable thru "U" Clamp.
5. Attach Assembly to Connector with AMP Guide Pins and Sockets.
6. Tighten "U" Clamp Nuts.