


## Installation Instructions for 4.3-10 connector 2081967


### 1 CABLE STRIPPING

Recommended cable stripping dimension as below:

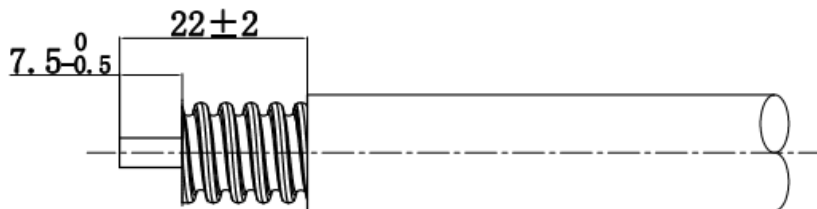

### 2 SOLDERING THE CENTER CONTACT

Solder the center contact on the cable as below:

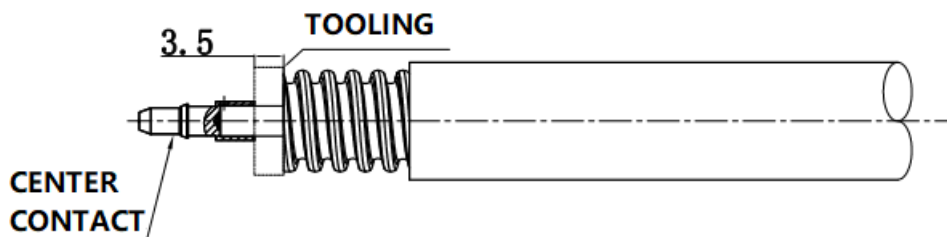

### 3 SOLDERING THE BODY

Solder the body with the cable, and add the heat-shrink tube/molding if need.

