

BRKT-3

Cable Mounting Bracket

Cable O.D. Range: 1.45-1.95"(37-50mm)

General Instructions

Suggested Installation Equipment (not supplied with kit)

- Electricians tape
-

Safety Instructions

1. Warning: When installing electrical power system accessories, failure to follow applicable personal safety requirements and written installation instructions could result in fire or explosion and serious or fatal injuries.

2. *As Raychem has no control over field conditions which influence product installation, it is understood that the user must take this into account and apply his own experience and expertise when installing product.*


3. The customer is responsible to make the final determination if parts are suitable for their application.

Installation Instructions

1. Install rubber pad around cable at desired location. Secure pad in position with one wrap of vinyl tape around center as shown. Ends of rubber pad should be towards back of clamp.

Note: Illustrations are for jacketed concentric neutral cables (JCN). Use same technique for unjacketed concentric neutral cables (CN).


Slide bracket around cable. Clamp openings may be manually widened for large cable.

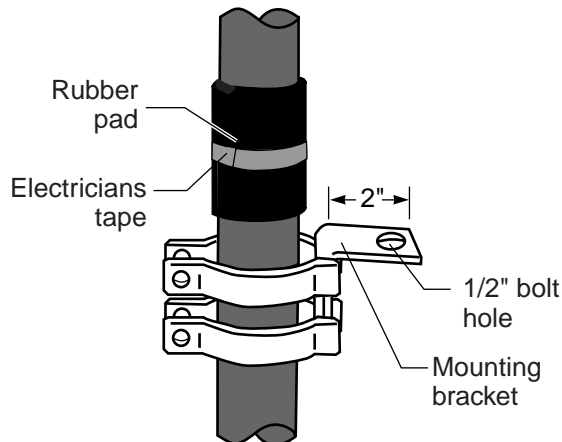

1

3. Raise bracket until rubber pad is centered under clamp.

4. Insert screws, install lock washers and tighten nuts to securely fasten cable to mounting bracket.

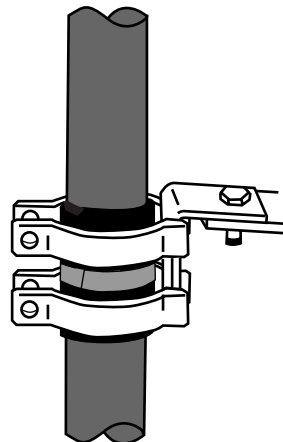

2