


Alternate Position of Clamp Plate for 90° Cable Outlet

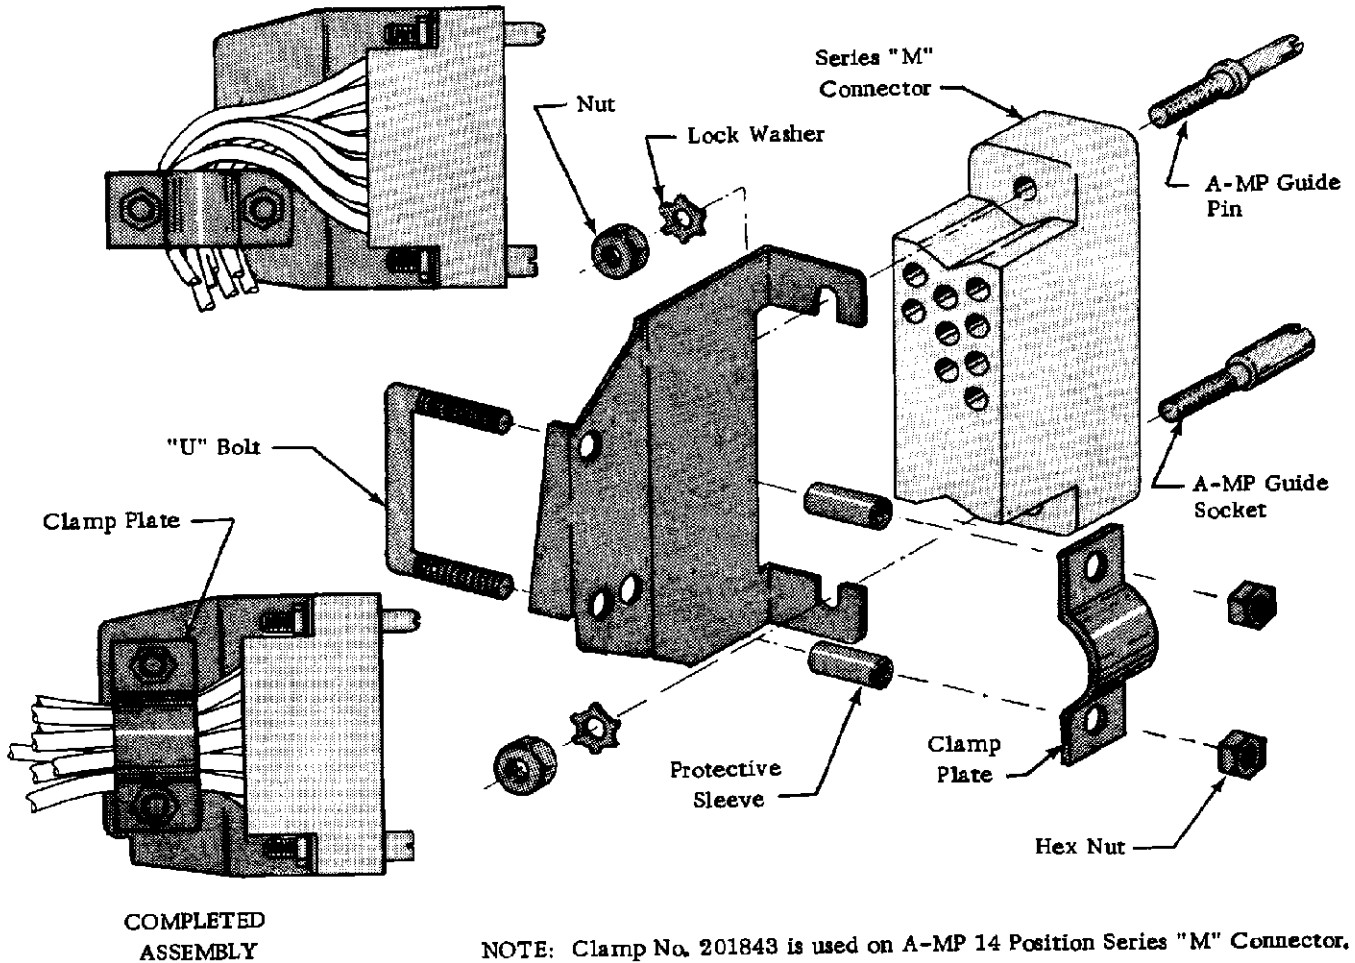

NOTE: Clamp No. 201843 is used on A-MP 14 Position Series "M" Connector.
 Clamp No. 201844 is used on A-MP 20 Position Series "M" Connector.

ASSEMBLY INSTRUCTIONS

1. Attach Strain Relief Assembly to Connector using A-MP Guide Pins, Sockets or 4-40 x 3/8 Fillister Head Screws with Nuts and Lock Washers.
2. Bundle Cable so that it will pass thru "U" Bolt.
3. Assemble Clamp as shown.
4. Tighten "U" Bolt Nuts.