




**A-MP STRAIN RELIEF CLAMP
CATALOG NO. 201845 FOR
26 POSITION SERIES "M" CONNECTOR**

IS-7018	
REL.	8-24-62
REV.	

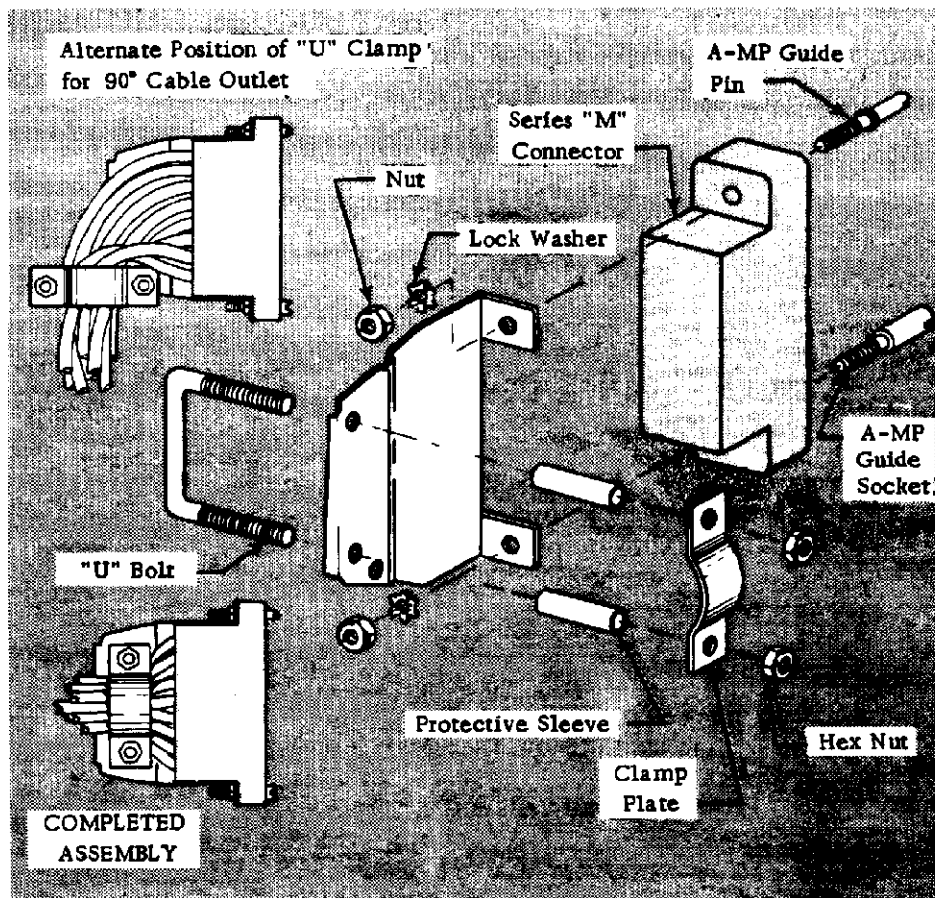

ASSEMBLY INSTRUCTIONS

1. Attach Strain Relief Assembly to Connector using A-MP Guide Pins, Sockets or 4-40 \times 3/8" Fillister Head Screws with Nuts and Lock Washers.
2. Bundle Cable so that it will pass thru "U" Bolt.
3. Assemble Clamp as shown.
4. Tighten "U" Bolt Nuts.