

D12P Differential Hall Effect Speed Sensor


	P	ro	dι	JC	tΙ	D
--	---	----	----	----	----	---

	Type # D12P	Product # 385Z-05334	Drawing # 113628		
Conorol	DIZP	3652-05334	113020		
General					
Function	The D12P series differential Hall effect speed sensors are suitable, in conjunction with a ferrous pole wheel, for generating square wave signals proportional to rotary speeds. They exhibit a dynamic function, whereby pulse generation down to 5 Hz is guaranteed. The sensor must be oriented with respect to the pole wheel as shown in the dimensional drawing.				
Technical data					
Supply voltage	832 VDC, protected against reverse polarity				
Current consumption	Max. 15 mA (without load)				
Signal output	Square wave signal from push-pull output stage, DC-coupled to the supply (negative pole = reference voltage), max. load current 30 mA Square wave signals Push-pull outputs: Imax = ± 20 mA With pull-up resistor (for R=560 Ohm): Ulow < 2.5 V, Uhigh > 0.95 * Usupply With pull-down resistor (for R=560 Ohm): Ulow < 0.1 V, Uhigh > Usupply-4.0 V The outputs are short-circuit proof and protected against reverse polarity.				
Frequency range	5 Hz20 kHz				
Housing	M12x1, tightening torque: max. 12 Nm				
Connection	Cable with connector: Cable: 3-wire, 3 x 0.21 mm2 (AWG24), stranded wires, PTFE isolation, green casing, max. outer \emptyset = 3.9 mm, min. bending radius = 60 mm, cable length according to dimensional drawing Connector: AMP 282105-1, 3 pins				
Protection	Sensor head: IP68 Connector: IP67				
Insulation	Housing and electronics galvanically isolated (Test: 500 V, 50 Hz for 1 minute)				

Pole wheel	Prerequisite: Toothed wheel of a ferrous material (e.g. Steel 1.0036).
	Optimal performance with
	Involute gear Tooth width > 10mm
	Side offset < 0.2 mm
	Eccentricity <0.2 mm
Air gap between sensor and	Module 0.5 (DP 50.8): 0.10.3 mm
pole wheel	Module 0.5 (DP 55.5): 0.11.5 mm
	Module 2.0 (DP 12.7): 0.12.0 mm
Electromagnetic compatibility EMC)	Please contact Jaquet for further details.
Vibration & shock immunity	Jaquet Greenline sensors are approved for rough environments. Please contact Jaquet for further details.
Operating temperature	-40°C125°C
Further Information	
Safety	All mechanical installations must be carried out by an expert. General safety
,	requirements have to be met.
Installation	These sensors use differential Hall probes. Therefore, the housing has to be aligned to the pole wheel according to the sensor drawing. Deviations in positioning may affect the performance and decrease the noise immunity of the sensor. During installation, the smallest possible pole wheel to sensor gap should be set. The gap should however be set to prevent the face of the sensor ever touching the pole wheel. Within the air gap specified the amplitude of the output signals is not influenced by the air gap. A sensor should be mounted with the middle of the face side over the middle of the pole wheel. Dependent upon the wheel width, a certain degree of axial movement is permissible. However, the middle of the sensor must be at minimum in a distance of 3 mm from the edge of the pole wheel under all operating conditions. A solid and vibration free mounting of the sensor is important. Eventual sensor vibration relative to the pole wheel can induce additional output pulses. The sensors are insensitive to oil, grease etc. and can be installed in arduous conditions.
Maintenance	Product cannot be repaired.
Maintenance Transport	Product cannot be repaired. Product must be handled with care to prevent damage of the front face.
	•

Disposal

Product must be disposed of properly, it must not be disposed as domestic waste.

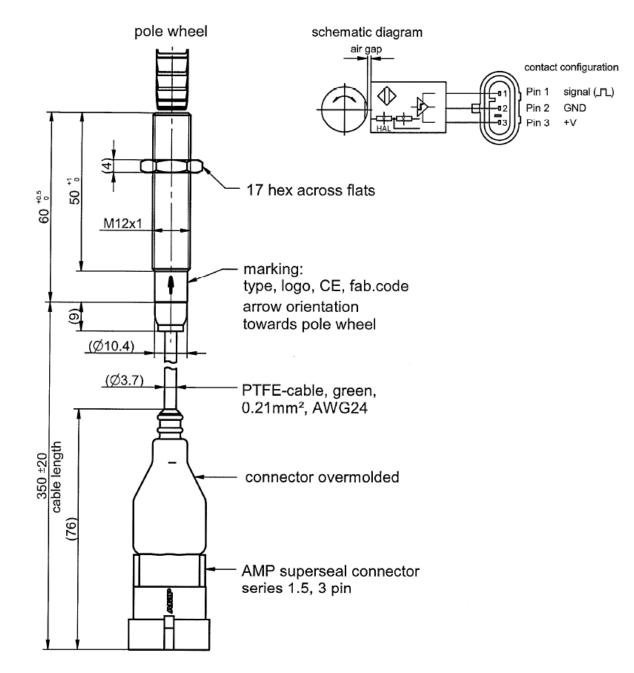

Dimensions in mm

CONTACT US

Tel +41 61 306 8822 jaquet.info@te.com

te.com/sensorsolutions

JAQUET, TE Connectivity, and TE connectivity (logo) are trademarks. All other logos, products and/or company names referred to herein might be trademarks of their respective owners.

The information given herein, including drawings, illustrations and schematics which are intended for illustration purposes only, is believed to be reliable. However, TE Connectivity makes no warranties as to its accuracy or completeness and disclaims any liability in connection with its use. TE Connectivity's obligations shall only be as set forth in TE Connectivity's Standard Terms and Conditions of Sale for this product and in no case will TE Connectivity be liable for any incidental, indirect or consequential damages arising out of the sale, resale, use or misuse of the product. Users of TE Connectivity products should make their own evaluation to determine the suitability of each such product for the specific application.

© 2017 TE Connectivity Ltd. family of companies All Rights Reserved.

