


The PT9232 delivers position feedback via RS232 serial communication to your data acquisition or controller system. The PT9232 sends a raw 16-bit count from 0000H to FFFFH. Additionally this device can be set to continuously send data or send data only when polled.

As the internal position sensing element is a precision potentiometer, this transducer maintains current accurate position even during power loss and does not need to be reset to a "home" position.

# **Output Signal**



# PT9232

# Cable Actuated Sensor Heavy Industrial • RS232 Communication

Linear Position/Velocity to 550 inches (1400 cm) **Aluminum or Stainless Steel Enclosure Options** 

**VLS Option to Prevent Free-Release Damage** 

**IP68 • NEMA 6 Protection** 

#### General

**Full Stroke Range** 0-75 to 0-550 inches

**Electrical Interface** RS232 **Format** HEX

± 0.10% full stroke Accuracy ± 0.02% full stroke Repeatability Resolution ± 0.003% full stroke

**Enclosure Material Options** powder-painted aluminum or 303 stainless steel

plastic-hybrid precision potentiometer Sensor

**Potentiometer Cycle Life** ≥ 250,000

**Maximum Retraction** see ordering information

Acceleration

**Maximum Velocity** see ordering information Weight, Aluminum (Stainless 8 lbs. (16 lbs.) max.

Steel) Enclosure

# Electrical

9...22 VDC Input Voltage **Input Current** 40 mA

**Baud Rate** 9600 (selectable to 38.4K)

**Update Rate** 32 msec


### Environmental

**Enclosure** NEMA 4/4X/6, IP 67/68 **Operating Temperature** -40° to 200°F (-40° to 90°C) Vibration up to 10 g to 2000 Hz maximum

SENSOR SOLUTIONS /// PT9232 12//2015 Page 1

# I/O Format

#### **Data Format**



## **Data Frame**

### 6 byte Hex string:

STX	CMD	Bo	B <sub>1</sub>	B <sub>2</sub>	ETX	
<b>STX</b> = 0x02	CMD = Con	nmand Code*	B <sub>0</sub> - B <sub>2</sub> =	- Data Field*	<b>ETX</b> = 0x03	

\*\_see below

Important! All communications to/from the transducer are in HEX!

#### **User Commands:**

	User Command				Sensor Response			
Description	<cmd></cmd>	<b<sub>0&gt;</b<sub>	<b<sub>1&gt;</b<sub>	<b<sub>2&gt;</b<sub>	<cmd></cmd>	<b<sub>0&gt;</b<sub>	<b<sub>1&gt;</b<sub>	<b<sub>2&gt;</b<sub>
Get Sensor Info	0x05	0x00	0x00	0x00	0x05	version <sup>(4)</sup>	date <sup>(5)</sup>	date <sup>(5)</sup>
Get Serial Number	0×15	0x00	0x00	0x00	0x15	se	rial number <sup>(</sup>	3)
Start Continuous Data	0x25	0x00	0x00	0x00	0x25	0x00	0x00	0x00
Stop Continuous Data	0x35	0x00	0x00	0x00	0x35	0x00	0x00	0x00
Get Position Data	0x45	0x00	0x00	0x00	0x45	$CMC^{(1)}$	$CMC^{(1)}$	status(2)

### (1)CMC - Current Measurement Count (Position)

The Current Measurement Count (CMC) is the output data that indicates the present position of the measuring cable.

The CMC is a 16-bit value that occupies the first two bytes ( $B_0$  and  $B_1$ ) of the data field.  $B_0$  is the MSB (most significant byte) and  $B_1$  is the LSB (least significant byte).

The CMC starts at 0000H with the measuring cable fully retracted and continues upward to the end of the stroke range stopping at FFFFH. This holds true for all ranges.

### (2)Status

The status byte is used as a flag to indicate the validity of the position signal that the internal electronics receives from the potentiometer.

Flags are as follows:

0x00 = GREEN, 0x55 = YELLOW, 0xAA = RED

A "green" flag shows everything OK. A "yellow" or "red" flag indicates that the sensor has either been extended beyond its range or that there is a problem with the potentiometer.

### (3)Serial Number

Each sensor has it's own unique serial number. This information can be retrieved by sending the sensor the "Get Serial Number" command.

The serial number is a 3 byte value from which ranges from 0 to 9999999 (decimal).

# (4)Version

This is a single byte value (0-255 decimal) which indicates the currently installed firmware version of the sensor.

### (5)Date

This is a 2 byte value showing the date of currently installed firmware. This value ranges from 01011 - 12319 (decimal). Format is MMDDY. While the month and day are expressed as two digit numbers the year is expressed in a single digit only.

Example: 08054 = August 5, 2004

#### **Baud Rate**

The baud rate can be set using switches 7 & 8 on the 8-pole DIP switch found on the rs232 controller board located inside the transducer.

DIP-7	DIP-8	baud rate
0	0	9600
1	0	19200
0	1	38400
1	1	9600




#### RS232 Controller Board and DIP Switch Location

# baud rate switches










a controller board to gain access to the controller board, remoi four Allen-Head Screw and remove end cover

Fig. 1 – Outline Drawing (18 oz. cable tension only)

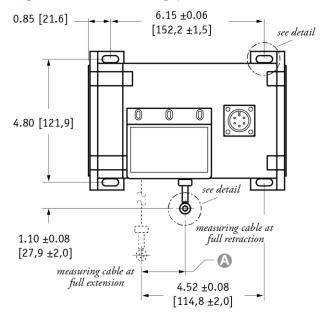

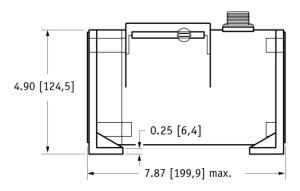


DIMENSIONS ARE IN INCHES [MM] tolerances are 0.03 IN. [0.5 MM] unless otherwise noted.

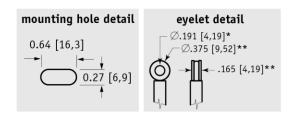

# A DIMENSION (INCHES)

MEASURI	NG	CA	BL	Ε
$\emptyset$ .034 in.	$\emptyset$ .0	47	in.	Ø
0.00				


RANGE	Ø.031 in.	$\emptyset$ .034 in.	$\emptyset$ .047 in.	$\emptyset$ .062 in.
75	n/a	0.22	0.29	0.37
100	n/a	0.29	0.39	0.49
150	n/a	0.44	0.59	0.73
200	n/a	0.58	0.79	0.98
250	n/a	0.73	0.98	1.22
300	n/a	0.88	1.18	1.47
350	n/a	1.02	1.38	1.71
400	n/a	1.17	1.57	1.96
450	n/a	1.31	1.77	n/a
500	n/a	1.46	1.97	n/a
550	1.61	1.61	n/a	n/a

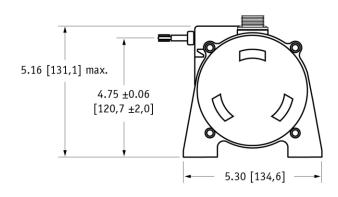

\* tolerance = +.005 -.001 [+.13 -.03] \*\* tolerance = +.005 -.005 [+.13 -.13]

# **Ordering Information**

# **Model Number:**



## Sample Model Number:

## PT9232 - 200 - AL - N34 - 26 - FR - M6

R range: enclosure 200 inches aluminum

(B) measuring cable: • measuring cable tension:

.034 nylon-coated stainless 18 oz.

cable exit:

front (horizontal)

(B) electrical connection:

6-pin plastic connector

# **Full Stroke Range:**

order code:	75	100	150	200	250	300	350	400	450*	500*	550*
full stroke range, min:	75 in.	100 in.	150 in.	200 in.	250 in.	300 in.	350 in.	400 in.	450 in.	500 in.	550 in.

\* – 36 oz. cable tension strongly recommended

## **Enclosure Material:**

order code:

AL


powder-painted aluminum

303 stainless


## **Measuring Cable:**

Order code:	N34	S47	S31	V62
cable construction:	Ø.034-inch nylon-coated stainless steel rope	Ø.047-inch bare stainless steel rope	Ø.031-inch bare stainless steel rope	Ø.058-inch PVC jacketed vectra fiber rope
available ranges:	all ranges	all ranges up to 500 inches	550 inch range only	all ranges up to 400 inches
general use:	indoor	outdoor, debris, high temperature	outdoor, debris, high temperature	high voltage or magnetic field

# **Measuring Cable Tension:**

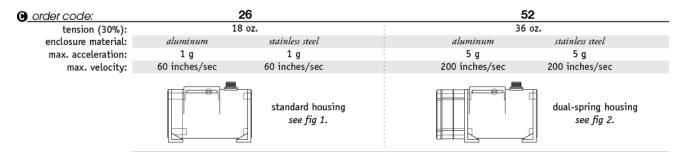

### Cable Exit:

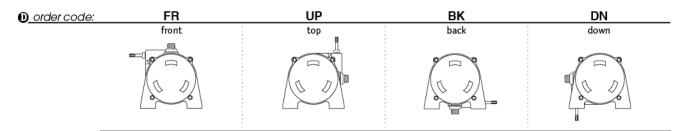

# **Electrical Connection:**




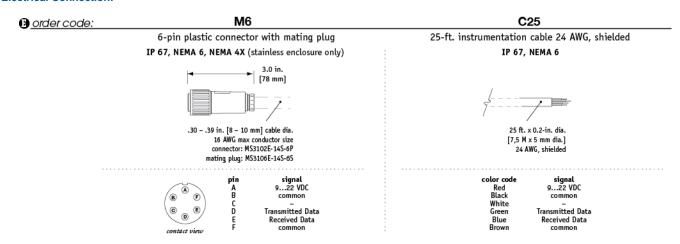


Fig. 2 – Outline Drawing (36 oz. cable tension only)

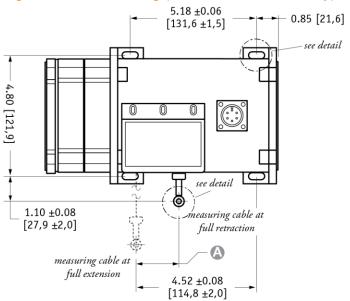

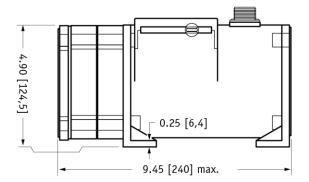


DIMENSIONS ARE IN INCHES [MM] tolerances are 0.03 IN. [0.5 MM] unless otherwise noted.

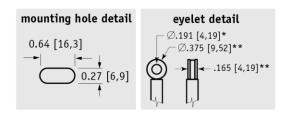

# (INCHES)

	MEASURING CABLE					
RANGE	Ø.031 in.	Ø.034 in.	Ø.047 in.	Ø.062 in.		
75	n/a	0.22	0.29	0.37		
100	n/a	0.29	0.39	0.49		
150	n/a	0.44	0.59	0.73		
200	n/a	0.58	0.79	0.98		
250	n/a	0.73	0.98	1.22		
300	n/a	0.88	1.18	1.47		
350	n/a	1.02	1.38	1.71		
400	n/a	1.17	1.57	1.96		
450	n/a	1.31	1.77	n/a		
500	n/a	1.46	1.97	n/a		
550	1.61	1.61	n/a	n/a		

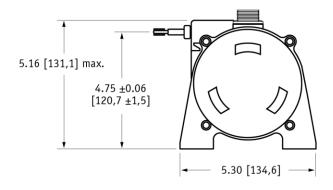

\* tolerance = +.005 -.001 [+.13 -.03] \*\* tolerance = +.005 -.005 [+.13 -.13]

#### **NORTH AMERICA**

info@celesco.com

Measurement Specialties, Inc., a TE Connectivity company 20630 Plummer Street Chatsworth, CA 91311 Tel +1 800 423 5483 Tel +1818 701 2750 Fax +1 818 701 2799

### TE.com/sensorsolutions

Measurement Specialties, Inc., a TE Connectivity company.

Measurement Specialties, TE Connectivity, TE Connectivity (logo) and EVERY CONNECTION COUNTS are trademarks. All other logos, products and/or company names referred to herein might be trademarks of their respective owners.

The information given herein, including drawings, illustrations and schematics which are intended for illustration purposes only, is believed to be reliable. However, TE Connectivity makes no warranties as to its accuracy or completeness and disclaims any liability in connection with its use. TE Connectivity's obligations shall only be as set forth in TE Connectivity's Standard Terms and Conditions of Sale for this product and in no case will TE Connectivity be liable for any incidental, indirect or consequential damages arising out of the sale, resale, use or misuse of the product. Users of TE Connectivity products should make their own evaluation to determine the suitability of each such product for the specific application.

© 2015 TE Connectivity Ltd. family of companies All Rights Reserved.

PT9232 12/01/2015